



Moonphase

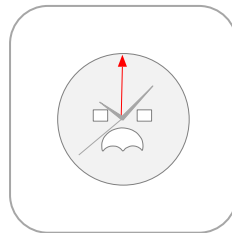


Hours, minutes
and seconds



Date - peripheral
index

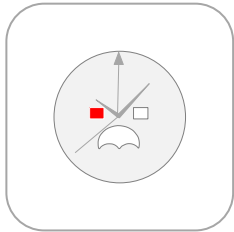

Day of the week

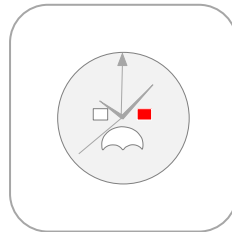

Month



Moon phase

To set the clock, proceed in the following order:

1- Setting of:

Day

2- Setting of:

Minutes



Hours

3- Setting of:

Moon phase

4- Setting of:


Month

5- Setting of:

Date




1

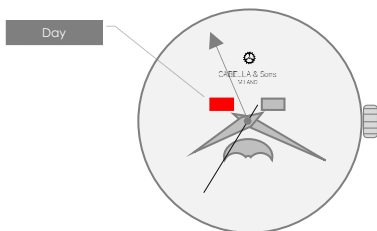

Setting of:

Day

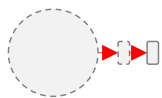

1- Pull the crown out two positions




2- Turn the crown clockwise to advance the Minute and Hour hand and set the Day of the Week (MON-SUN)

NOTE: to set the Day of the Week (MON-SUN), it is necessary to advance the Hour hand by 24H

The Day of the Week (MON-SUN) changes between midnight and five am

Do not turn the crown counterclockwise


2

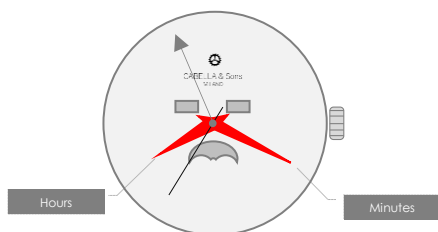

Setting of:

Minutes

Hours

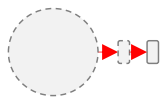

1- Pull the crown out two positions



2- Turn the crown clockwise to advance the Minutes and Hours hands.

NOTE: To be sure that the time remains set correctly, once the desired time is set, we recommend moving the large hand forward 5 minutes and then moving it back to the desired time. Apart from this last operation, do not turn the crown counterclockwise.

The second hand starts when the crown is returned to the home position.

Make sure the day or night time is set correctly.


Date hand (1 -> 31) advances at midnight.



CABELLA & Sons
MILANO


Moonphase

3

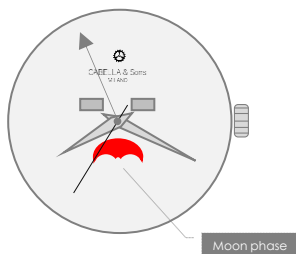

Setting of:

 Moon phase




1- Pull the crown out one position



2- Turn the crown clockwise to advance the moon phases.


Moon phase	New moon	First quarter	Full moon	Last quarter
Age of the moon	0 days	7 days	15 days	22 days
Tide	Spring Tide	Neap Tide	Spring Tide	Neap Tide
Display				

4

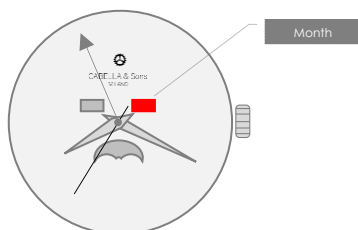

Setting of:

Month

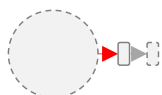

1- Pull the crown out one position




2- Turn the crown counterclockwise to advance the Date hand (1 -> 31)

3- The Month (JAN-DEC) moves forward when the Date hand passes the 31st




5

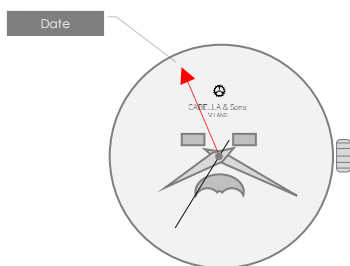

Setting of:

Date

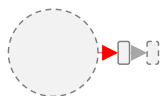

1- Pull the crown out one position



2- Turn the crown counterclockwise to advance the Date hand (1 -> 31)

NOTE: The Month (JAN-DEC) moves forward when the Date hand passes the 31st

For months with less than 31 days, manually advance the date hand at the end of the month and set it to day 1

Do not set the date between 21:00 and 00:30, as the date may not update correctly the next day

Note: Use batteries SR621W, 364



CABELLA & Sons
MILANO

Moonphase